




TRIPLE AXLE / DRIVER SIDE

REPLACE THE SIDE. KEEP THE SYSTEM.

One driver side harness. Match the connector types and branch spacing before ordering.

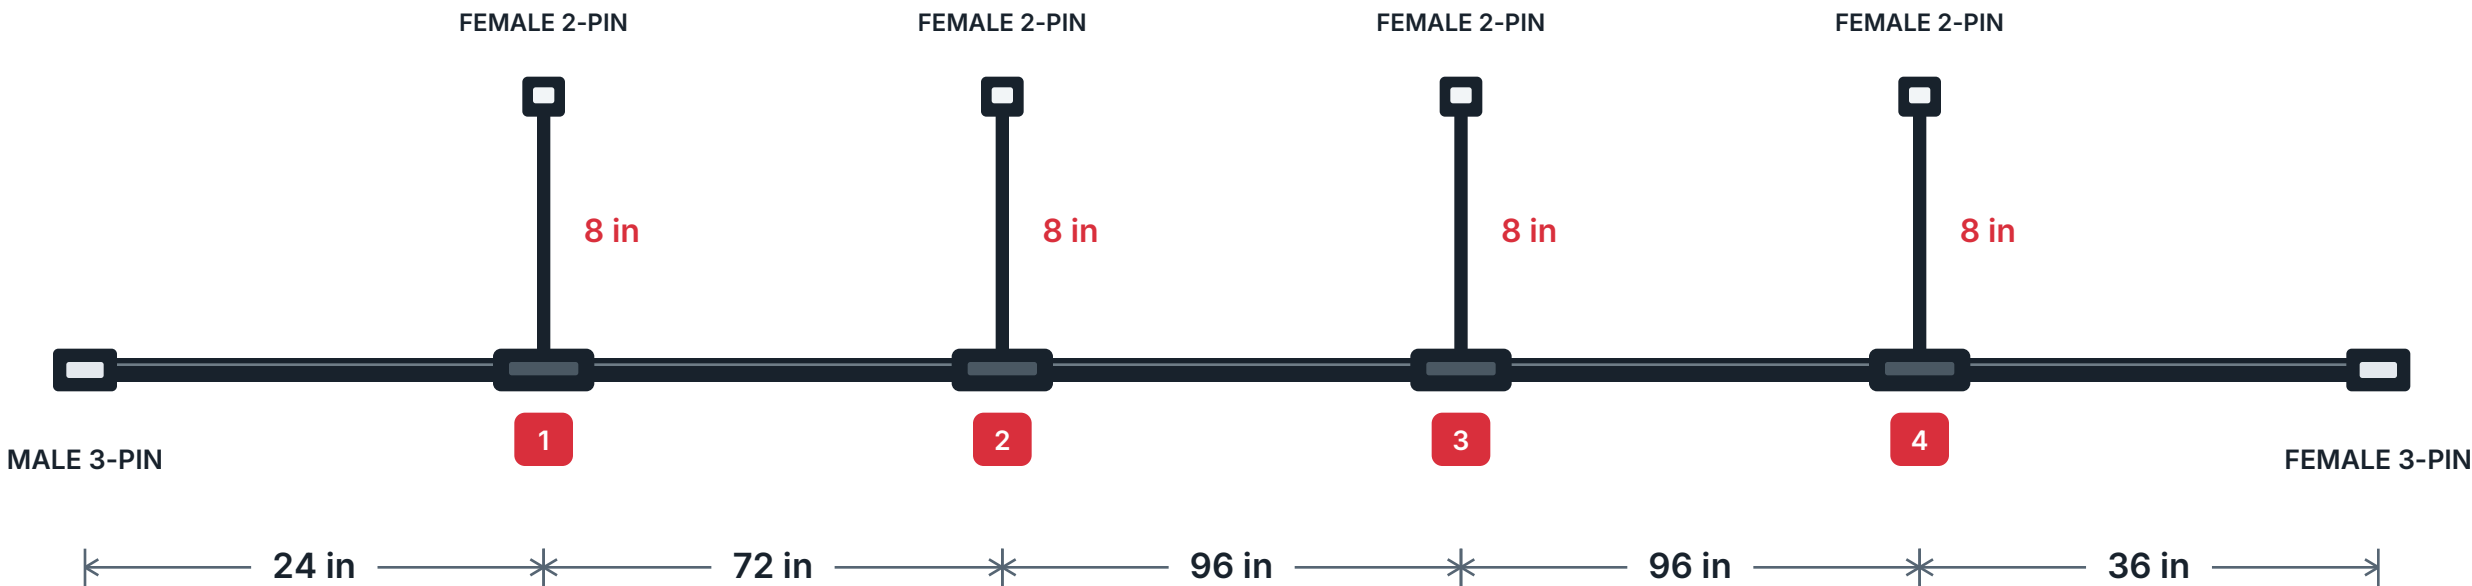

MAIN-RUN SEGMENTS

$$24 + 72 + 96 + 96 + 36 = 324 \text{ in}$$

Calculated sum of the labeled spans; connector datum convention is not defined in the source.

MAIN CABLE	BRANCH LEADS	EACH BRANCH	JUNCTIONS
3 conductors / 18 AWG	2 conductors / 18 AWG	8 in / female 2-pin	4 branch locations

NOT TO SCALE | Dimensions in inches | Wire colors and pin assignments are not specified in the source.


18 AWG conductors. Match connector types and branch spacing to your existing harness.



TRIPLE AXLE / PASSENGER SIDE

REPLACE THE SIDE. KEEP THE SYSTEM.

One passenger side harness. Match the connector types and branch spacing before ordering.

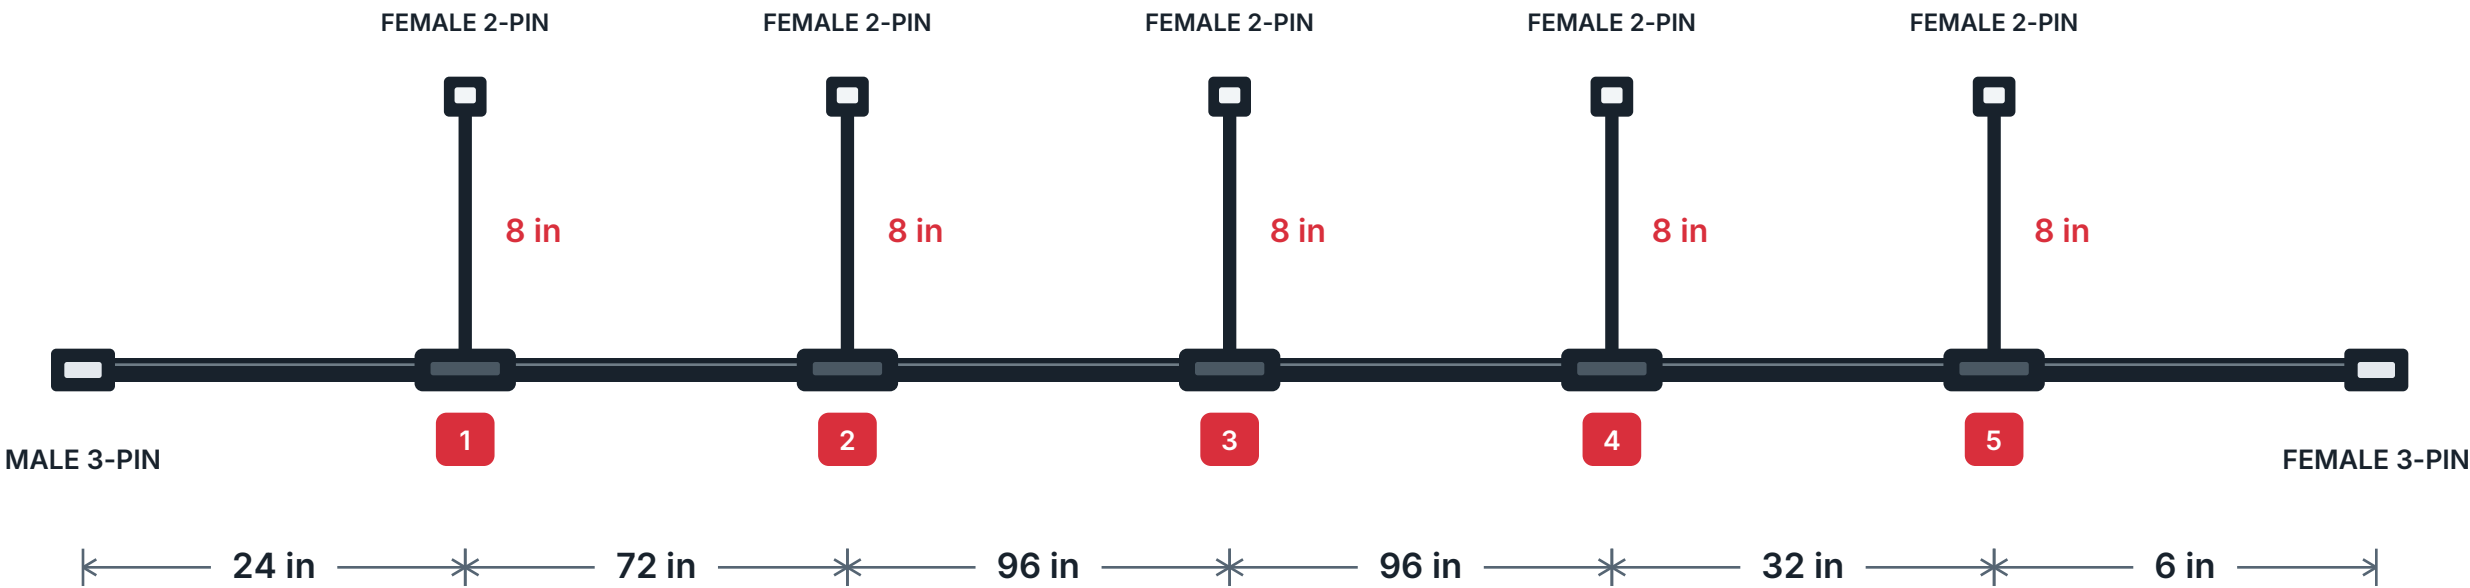

MAIN-RUN SEGMENTS

$$24 + 72 + 96 + 96 + 32 + 6 = 326 \text{ in}$$

Calculated sum of the labeled spans; connector datum convention is not defined in the source.

MAIN CABLE	BRANCH LEADS	EACH BRANCH	JUNCTIONS
3 conductors / 18 AWG	2 conductors / 18 AWG	8 in / female 2-pin	5 branch locations

NOT TO SCALE | Dimensions in inches | Wire colors and pin assignments are not specified in the source.

KRAKENWIRING.COM

18 AWG conductors. Match connector types and branch spacing to your existing harness.