




KRAKEN / PHYSICAL ROUTING GUIDE

BASIC WIRING KIT

FLAT 4 CONFIGURATION

TOP VIEW / FRONT AT RIGHT

01 CONNECT THE VEHICLE

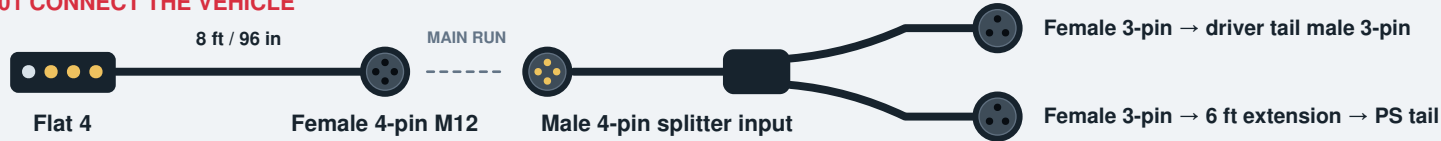


ONE FEED. TWO SIDES.

M4-F3-DSPS splitter

Pin counts shown; no circuit pinout.

02 ROUTE THE HARNESS

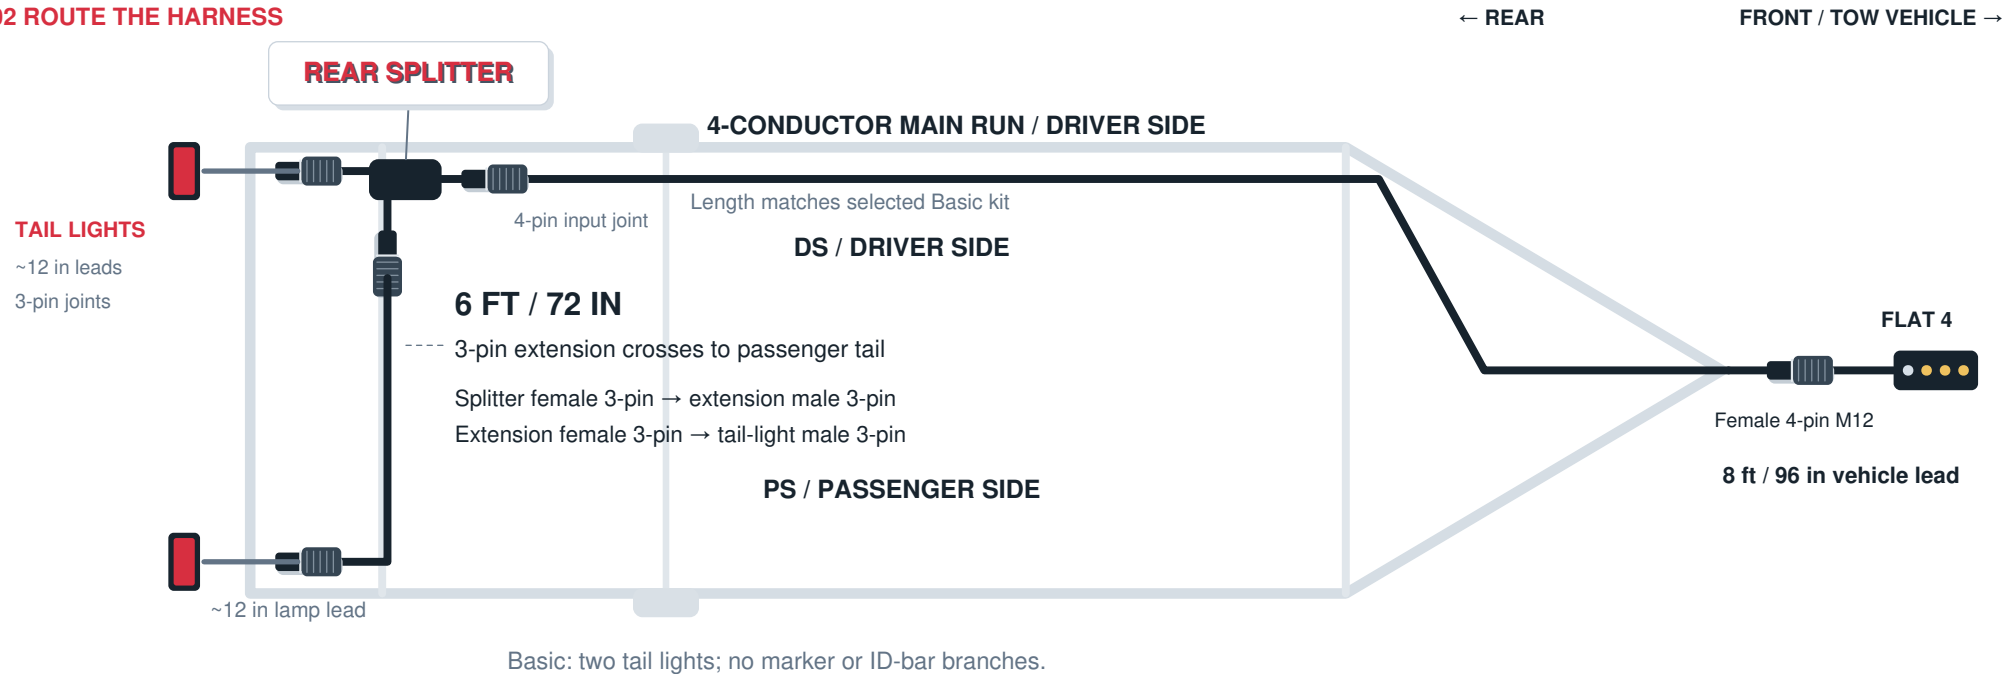

03 CHECK THE LENGTHS

Flat 4 → female 4-pin M12 → driver-side main run → rear splitter.

Rear splitter: male 4-pin input / two female 3-pin outputs. One output connects to the driver tail.

Other output: 6 ft (72 in) male-to-female 3-pin extension → passenger tail. Each lamp lead: approximately 12 in.

Not to scale. Dimensions follow the cable path, not trailer length. Connector symbols show mating types, not electrical pin assignments.